BLUE STAGE 1000 T

Instruction Manual

model:

PF 5055	STAGE 1000 T - ANTIALO
PF 5057	STAGE 1000 T - FRESNEL

ATTENTION

This instruction manual contains important information about the installation and use of the projector. Please read and follow these instruction carefully.

ATTENTION

Always ensure that the power to the projector is disconnected before opening the projector or commencing any maintenance work.


http://www.fal.it fal@iagnacao.com

INDEX

01 – SAFE USAGE OF THE PROJECTOR 3
02 – INSTALLING THE PROJECTOR 3
03 – FITTING THE LAMP 3
04 – POWER SUPPLY - MAINS 4
05 – BEAM ADJUSTMENT 4
06 – FILTER FRAME 4
07 – MAINTENANCE 4

Please note that as part of F.A.L.'s ongoing commitment to continuous product development, specifications are subject to change without notice. Whilst every care is taken in the preparation of this manual F.A.L. reserves the right to change specifications in the course of product improvement. The publishers cannot be held responsible for the accuracy of the information herein, or any consequence arising from them.

01 – SAFE USAGE OF THE PROJECTOR


- Do not attempt to dismantle and modify the projector.
- Do not allow contact with water or any other fluids, or metallic objects (IP 20).
- Do not install the projector in areas of high humidity.
-  Not allowed to be mounted directly on inflammable surfaces.
- Keep at least 0.25m distance between the projector and adjacent inflammable surfaces.
- The projector must only be used complete with its protective grill and/or front lens.
-  The protective grill, lenses or ultraviolet filter must be changed if they are visibly damaged to the point at which their effectiveness is diminished, for example by becoming cracked or deeply scratched.
- The lamp must be replaced if it becomes damaged or deformed by heat.
- 3 m Keep at least 3m between the lamp and the illuminated surfaces.
- Avoid direct exposure to the light from the lamp. The light is harmful to the eye.
- Note: the lamp reaches very high temperatures, allow at least 10 minutes for the lamp to cool completely before attempting to handle it.
- To maintain an optimum light output it is recommended that the lens and reflector should also be regularly cleaned.


02 – INSTALLING THE PROJECTOR

The projector should be mounted with an M10 bolt through the 11mm hole in its bracket (1). For safety the projector should have a secondary fixing with a safety chain through the appropriate hole (3). The projector bracket allows an angle adjustment of +60°/ -45° and, once positioned, the knob (2) should be firmly tightened. The projector mounting bracket can also be easily rotated to be positioned on the underside of the projector for tripod mounting etc.

03 – FITTING THE LAMP


The lamp access hatch is released by turning fastening screw (4), located under the front of the projector, a quarter turn anticlockwise. Insert the CP70 1000W lamp into its socket. (Use only the lamp version that is correct for the mains voltage 120V / 230V / 240V). Insert the lamp with care and without using excessive force, use a cloth to hold the lamp and do not touch the glass of the lamp directly with your hands. Close the access hatch.

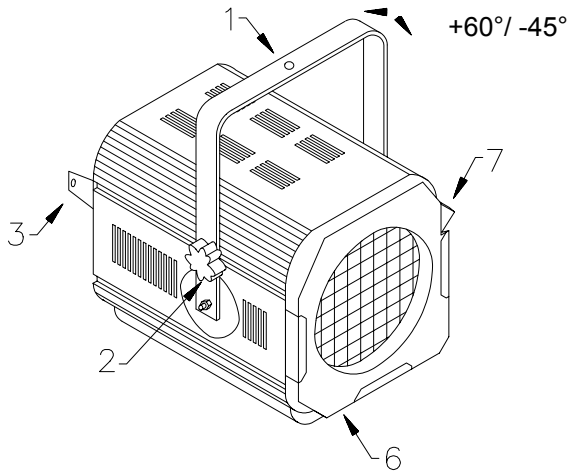

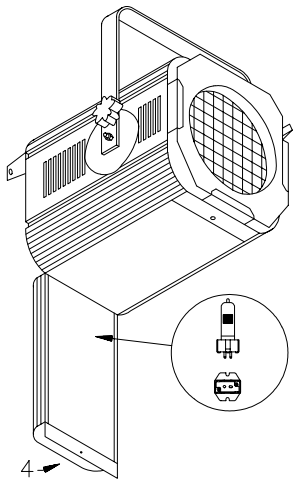

04 – POWER SUPPLY - MAINS

Use the plug provided to connect the mains power to the projector. The blue wire is neutral (N), the brown wire is live (L), and the yellow and green wire is earth (E).
IMPORTANT: It is essential that each projector is correctly earthed and that electrical installation conforms to all relevant standards.

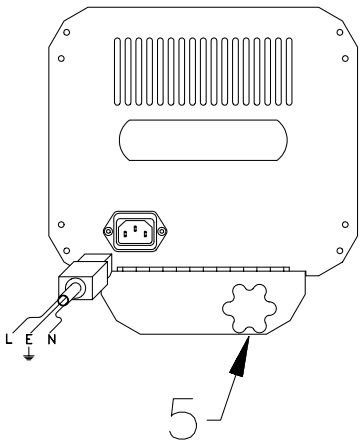

05 – BEAM ADJUSTMENT

To adjust the beam width loosen the knob (5) and slide it slowly forwards and backwards, taking care not to damage the lamp. Maximum beam width is obtained by moving the knob fully forwards. Once adjusted, tighten the knob (5) again.

06 – FILTER FRAME

The filter frame (6) is located in the front of the projector. Open the spring latch (7) and slide the filter frame out. Insert the coloured gel, replace the frame and close the latch. (It is recommended that only filters with a high temperature capacity are used).

07 – MAINTENANCE

If the protective grill or any of the lenses become damaged or broken they should be replaced.
If the lamp becomes damaged or deformed in any way it must be replaced.
Clean the lenses periodically (at least every six months) to maintain optimum light output from the unit.