
WORK PRO

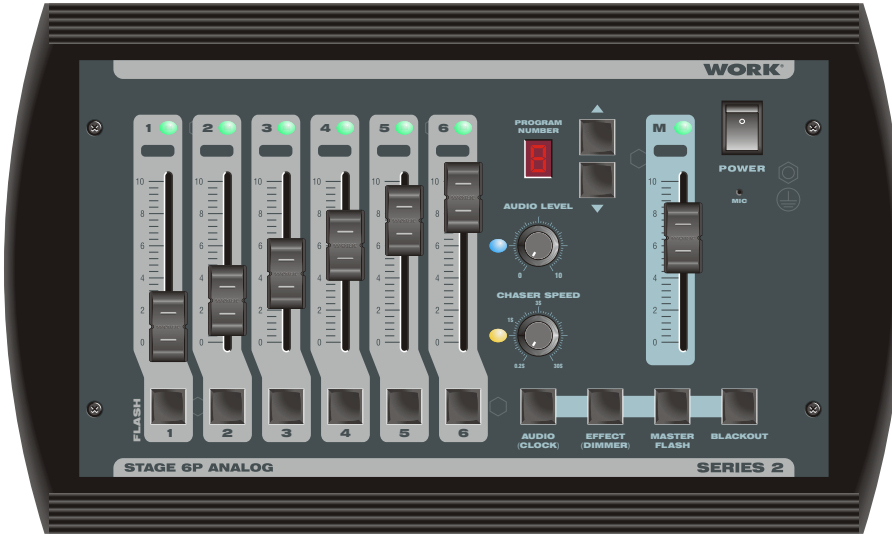

STAGE 6P ANALOG

User Manual / Instrucciones de Usuario


STAGE 6P ANALOG

6 CHANNEL DIMMING CONSOLE

CONSOLA DIMMER DE 6 CANALES

English Version *Page 1*

Versión Español *Página 7*



This symbol on the product or on its packaging indicates that this product shall not be trated as household waste. Instead it shall be handed over to the applicable collection point for the recycling of electrical an electronic equipment. By ensuring this product is disposed of correctly, you will help prevent potential negative consequences for the environment and human health, which could otherwise be caused by inappropriate waste handling of this product. The recycling of amterials will help to conserve natural resources. For more detailed information sabout recycling of this product, please contact your local city office, your household waste disposal service or the shop where you purchased the product.



Este símbolo en su equipo o embalaje, indica que el presente producto no puede ser tratado como residuos domésticos normales, sino que deben entregarse en el correspondiente punto de recogida de equipos electrónicos y eléctricos. Asegurándose de que este producto es desechado correctamente, Ud. está ayudando a prevenir las consecuencias negativas para el medio ambiente y la salud humana que podrían derivarse de la incorrecta manipulación de este producto. EL reciclaje de materiales ayuda a conservar las reservas naturales. Para recibir más información, sobre el reciclaje de este producto, contacte con su ayuntamiento, su punto de recogida más cercano o el distribuidor donde adquirió el producto.

Features

Thank you for your purchase of WORK- **STAGE 6P ANALOG**
This product main features includes:

- 6 Channel dimming chaser with one Schuko socket per channel
- Master/Individul dimmer
- 10 built-in chasing programs(0~9)
- AUTO CHASE/AUDIO CHASE modes and MANUAL DIMMER mode available
- Chase speed and Audio level can be set as user's desire
- Full on and Blackout functions allow you to highlight or kill overall output instantly
- Audio triggering function to the music beat
- One-digit segment display
- Power Failure Memory

Safety Information


To optimize performance of this product and protect personal safety, please read thoroughly and understand fully following operating instructions in this manual and the printings on the case of this production carefully. After you have finished reading the instructions, please put them away in a safe place for future reference in case of difficulty or trouble.

- This unit must be earthed.
- To prevent or reduce the Risk Of Electrical Shock or Fire, Never expose this unit to rain or moisture.
- Installation and electrical connections must be carried out by qualified personnel. In the event installation is carried by unqualified persons, the manufacturer declines any responsibility for consequent damage that might occur to the unit and the warranty might be void.
- Do not allow for any flammable liquids to come in close contact with the unit.
- Handle this unit carefully, any strong shock or vibration may result in malfunction.
- Do not dismantle or modify this unit. There are no user serviceable parts inside.
- Do not operate this unit if the internal components are exposed.
- When replacing fuses, always replace with the exact same type and disconnect the power.
- Every unit has been thoroughly tested and carefully packed before delivery. Unpack the shipping carton carefully, check carefully for sure your new unit is not damaged and all accessories not missing. In the event damage has been found or parts are missing, please do not use it and contact your authorized dealer immediately.
- All rights reserved. No part of this documentation may be reproduced in any form or by any means or used to make any derivative work(such as translation, transformation, or adaptation)without permission from WORK.

Notice:

Specifications and improvements in the design of this product and this manual are subject to change without prior notice.

Front View

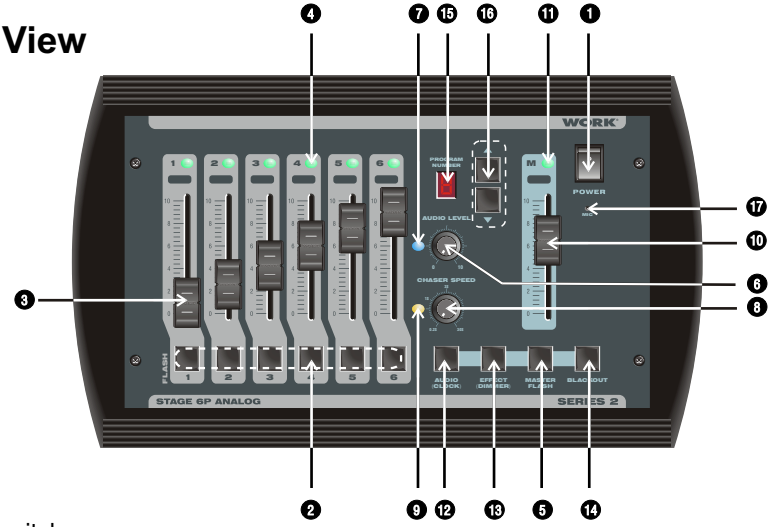


1. Power switch:
   This switch is used to turn the main power on or off
2. 1-6 Flash Buttons
   Momentary flash of individual channel level at full intensity
3. (1-6) Individual Channel Fader(s)
   Used to adjust the intensity level for each individual channel in Manual dimmer mode
4. (1-6) Individual Channel Indicator (s)
   Used to indicate corresponding intensity level of each channel.
5. Master Flash Button
   You will access a “FULL ON” function by pressing and holding this button down, it means all channels will momentarily output at full intensity. Release it to exit the “FULL ON” function.
6. Audio Level Knob
   Used to adjust the audio sensitivity of the unit when controlled by AUDIO in AUTO CHASE mode.
7. Audio Level Indicator
   When and active audio signal is received by the unit, this indicator will flash constantly.
8. Chase Speed Knob
   Used to adjust the chase speed level as user´s desire when controlled by CLOCK in AUTO CHASE mode.
9. Chase Speed Indicator
   Its flash frequency means chase speed as users desire.

Controls & Functions

10.Master Fader
Used to adjust the intensity level for all channels in MANUAL DIMMER mode
11.Master Indicator
Used to indicate corresponding intensity level of all channels.
12.AUDIO(CLOCK) Button
In AUTO CHASE mode, press this button, the Scene will be controlled by the audio effect. Press this button down again, the Scene will be controlled by the chase speed effect.
13.EFFECT(DIMMER) Button
Pressing down this button for AUTO CHASE mode(at this time, you can select chasing programs by pressing UP/DOWN), and press this button again for MANUAL DIMMER mode.
14.Blackout Button
Press and hold down this button to kill the overall channel output momentarily, and release this button to reactive the channel output.
15.Program Number Display
To show the current program number.
16.UP/DOWN button
Press UP/DOWN button to select the chasing program as user's desire from(0-9).
17. MIC
This built-in microphone picks up audio signal for audio trigger

Rear View

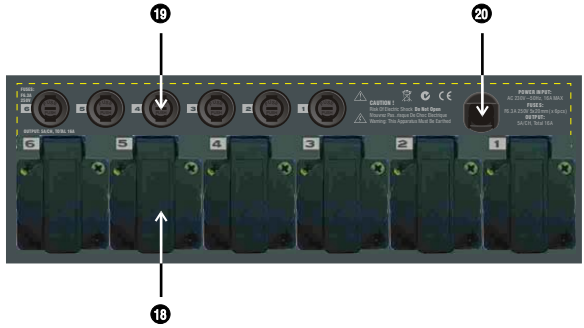

18.Schuko Output Sockets(1-6)

There are six 230V Schuko sockets and each socket is labeled the packs relevant channel number. Up to 5 amps can be connected into each channel.

19.Fuse Holders(1-6)

These fuse holder house one 6.3 amps 250V 5x20mm fuse each. Each channel fuse protects the corresponding internal components from getting damaged if there were ever a short or voltage spike.

20.Power Input

The line cord supplies the power to your unit. Please plug into a 230V～50Hz outlet

Technical Specifications

Power Input.....AC 230V ~ 50Hz, 16A MAX

Channel Output.....5A/CH. Total 16A(MAX.)

Channel fuses.....F 6.3A 250V, 5×20mm

Internal Fuse..... F 0.5A 250V, 5×20mm

Dimensions.....350×208×130mm

Weight.....Approx.3.8kg

Características

Gracias por la adquisición de nuestro producto **STAGE 6P ANALOG.** La unidad incorpora las siguientes características.

- Chaser dimmerizable de 4 canales con 1 conector schucko por canal
- Dimmer Master e individual
- 10 programas incorporados (0~9)
- Modos disponibles: AUTO CHASE/AUDIO CHASE y MANUAL DIMMER
- Velocidad de Chase y nivel de Audio ajustables por el usuario.
- Funciones Full on y Blackout functions que permiten el encendido total o apagado total de las salidas de manera instantánea
- Memoria ante fallos de alimentación

Información de Seguridad


Para optimizar el rendimiento de este producto y proteger su seguridad personal, por favor lea atentamente las siguientes instrucciones de funcionamiento. Después de finalizar su lectura, guardelas en un sitio seguro para futuras referencias o en elcaso de dificultades o problemas

- Esta unidad debe ser conectada a tierra.
- Para prevenir o reducir el riesgo de descargas eléctricas o fuego, nunca exponga esta unidad a la lluvia o la humedad.
- La instalación y conexión eléctrica debe ser realizada por personal cualificado. En el caso que la instalación haya sido efectuada por personas inexpertas, el fabricante declina cualquier responsabilidad como consecuencia de los daños que ocurran con la unidad y la garantía queda anulada.
- No permita que líquidos inflamables o agua, entren en contacto con la unidad.
- Maneje la unidad con cuidado, cualquier golpe fuerte o vibración puede afectar a la unidad
- No desmantele o modifique la unidad. No hay elementos para el usuario en el interior
- No haga funcionar la unidad si los componentes internos están expuestos
- Cuando sustituya algún fusible, use un fusible del mismo tipo y desconecte la red
- Cada unidad ha sido cuidadosamente comprobada y empaquetada antes del transporte. Desembale la unidad con cuidado, comprobando que no ha sido dañada y están todos los accesorios. En el caso de detectar daños, o falta de accesorios, no utilice la unidad y contacte con su distribuidor.
- Reservados todos los derechos. Ninguna parte de este manual debe ser reproducida por cualquier medio, traducción, transformación o adaptación sin permiso de **WORK®**

Nota:

Las especificaciones o mejoras en el diseño de este producto y manual están sujetos a cambios sin previo aviso.


Vista Frontal

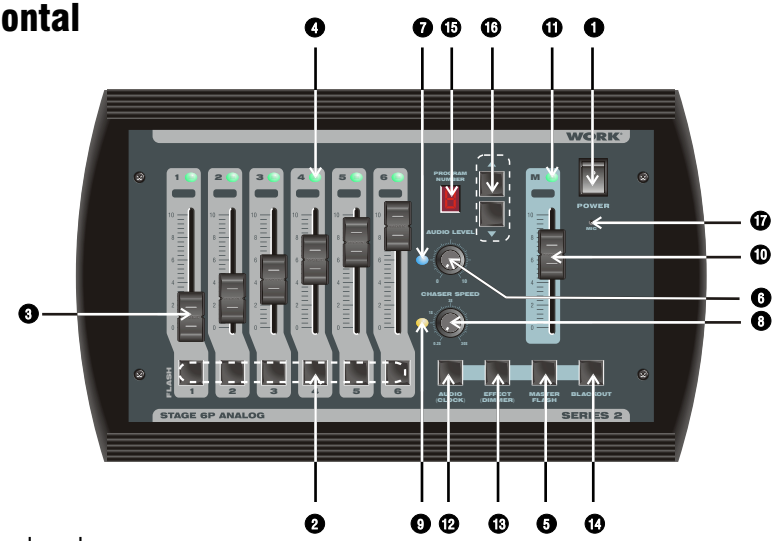

1. Interruptor de red:
   Este interruptor se usa para encender o apagar la unidad
2. Botones Flash 1-6
   Pasa momentáneamente todos los canales a intensidad total
3. Faders de canal (1-6)
   Usados para ajustar el nivel de intensidad de cada canal
4. Indicadores de canal (1-6)
   Usados para indicar el nivel de intensidad correspondiente a cada canal.
5. Botón Master Flash
   Accede a la función “FULL ON” presionando y manteniendo esta tecla, esto significa que, momentáneamente, todos los canales pasan a total intensidad, al soltarlo sale de la función “FULL ON”.
6. Mando Nivel de Audio
   Usado para ajustar la sensibilidad de audio de la unidad cuando esté controlado por AUDIO en modo AUTO CHASE.
7. Indicador de nivel de Audio
   Cuando una señal de audio activa sea recibida por la unidad, este indicador parpadeará constantemente.
8. Mando de velocidad de chase
   Usado para ajustar la velocidad de chase a los deseos del usuario cuando se controle con el reloj interno en modo AUTO CHASE.
9. Indicador de Velocidad de Chase
   Parpadea a la velocidad de chase marcada

10. Master Fader
    Usado para ajustar el nivel de intensidad de todos los canales en modo MASTER DIMMER.
11. Indicador Master
    Usado para indicar el nivel de intensidad correspondiente de todos los canales.
12. Botón AUDIO (CLOCK)
    En modo AUTO CHASE, presione esta tecla, la escena será controlada por el efecto de audio. Presione la tecla otra vez, la escena será controlada por la velocidad del Chase.
13. Botón EFFECT (DIMMER)
    Presione esta tecla en el modo AUTO CHASE, al mismo tiempo puede seleccionar los programas presionando UP/DOWN, presionando la tecla otra vez pasa a modo DIMMER MANUAL.
14. Botón Blackout
    Presione y mantenga esta tecla para apagar todas la salidas momentáneamente, al soltar la tecla, reactiva todas las salidas.
15. Pantalla
    Muestra el número de programa en ejecución
16. Tecla UP/DOWN
    Presione esta tecla para seleccionar el programa de chase (0-9)
17. MIC
    Este micrófono incorporado recoge señal de audio para el disparo por audio

Vista Trasera

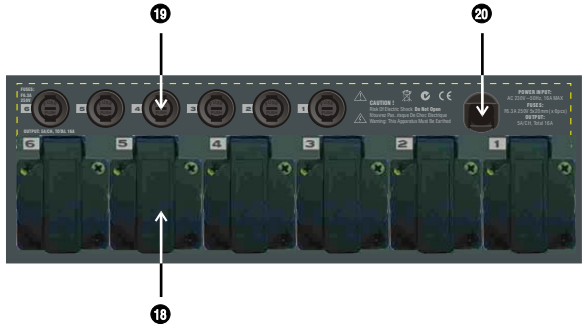

18. Conectores Schuko de salida (1-6)
    Estos 6 conectores schuko de 230 V llevan una etiqueta con el número de canal al que pertenecen. Hasta 5 A pueden ser conectados en cada canal.
19. Portafusible (1-6)
    Estos portafusibles alojan fusibles de 6.3 A 250 V 4 x 20 mm. Cada fusible de canal protege sus correspondientes componentes internos ante cortocircuitos o picos de tensión.
20. Alimentación
    Este cable suministra alimentación a la unidad. Conecte a una toma de 230 V AC 50 Hz.

Especificaciones Tecnicas

Alimentación .....AC 230V ~ 50Hz, 16A MAX

Salida de Canal .....5A/CH. Total 16A(MAX.)

Fusibles de canal .....F 6.3A 250V, 5x20mm

Fusible Interno ..... F 0.5A 250V, 5x20mm

Dimensiones.....350×208×130mm

Peso.....Aprox.3.8kg

Equipson, S.A.
www.equipson.es
support@equipson.es

CE

WORK

All Rights Reserved!

24-004-1854 Rev1.0