## **MX400D**

# SHURE Microflex®



## **MX400D**

# **Desktop Microphones**

Shure Microflex® MX400D Series microphones are miniature electret condenser gooseneck microphones with a desktop base and a 3 m (10 ft.) cable. Desktop base allows microphones to be used in multi-purpose rooms where quick setup is required, or where permanent installation is impractical.

#### **Features**

- Wide dynamic range and frequency response for accurate sound reproduction
- Interchangeable cartridges that provide a choice of polar pattern for each application
- · Programmable mute button and LED indicator
- Logic input and output terminals for remote control or use with automatic microphone mixers
- Balanced, transformerless output for increased immunity to noise over long cable runs
- · RF filtering

#### MX400 Series Model Variations

MX400 microphones are available with 305 mm (12 in.) or 457 mm (18 in.) goosenecks.

- "S" models include a mute button and LED.
- "D" models include a desktop base with programmable mute button and LED and logic input and output.
- "SE" models feature a surface mount flange with side-exit cable.


The polar pattern of the included cartridge is indicated by a model number suffix:

- /C Cardioid
- /S Supercardioid
- /N Cartridge not included

## **Interchangeable Cartridges**



Microflex microphones use interchangeable cartridges that allow you to choose the polar pattern for different installations.




130°

R185 Cardioid


## **Snap-Fit Windscreen**

- Snap into the groove below the cartridge.
- To remove, spread the gap with a screwdriver or thumbnail.
- Provides 30 dB of "pop" protection.




## **Microphone Placement**


- Aim the microphone toward the desired source, such as the talker.
- Aim it away from any unwanted source, such as a loudspeaker.
- Place the microphone within 15 to 30cm (6 to 12 in.) of the desired sound source.
- Always use the supplied windscreen or optional metal windscreen to control breath noise.
- If four or more microphones will be open at the same time, use of an automatic mixer, such as the Shure SCM810 or SCM410, is recommended.

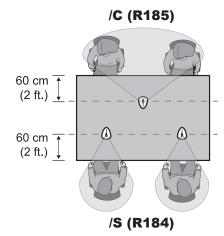

## Securing to a Surface

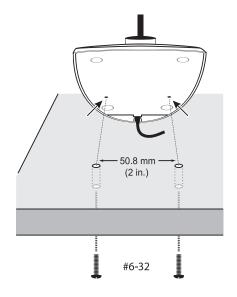

### **DIP Switches**

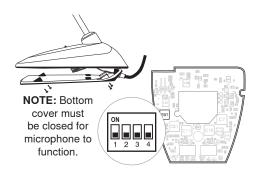


Use the DIP switches to configure logic settings and mute button behavior.

The DIP switches are covered with a piece of clear tape at the factory. Remove tape to modify the switch settings.

	OFF (factory default)	ON
1	Momentary	Toggle
2	Push-to-mute	Push-to-talk
3	Mute button enabled, LED illuminates when mic is active	Disable mute button (microphone always on), logic controls LED
4		

## **Wiring Diagram**

**NOTE:** Audio and logic ground are connected at microphone base.

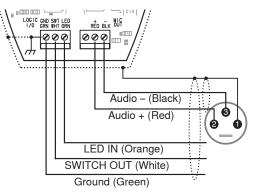

## **Mute Button Configuration**

Use DIP switches 1 and 2 to configure the mute button, as follows.

Be sure to set DIP switch 3 **off** (factory default) so that the mute button controls audio from the microphone.

Switch Function	DIP Switch Setting
Momentary: push-to-mute (as shipped).	ON
Momentary: push-to-talk	ON
Toggle: (Push On/Push Off): Mic is active when powered on	ON 1 2 3 4
Toggle: (Push On/Push Off): Mic is mute when powered on	ON 1 2 3 4

## **Logic Wiring**



**Green** (LOGIC GROUND): Connects to the logic ground of an automatic mixer, switcher, or other equipment.

**Orange** (LED IN): Set DIP switch 3 on to use LED IN. When shorted to LOGIC GROUND, the LED turns on.

White (SWITCH OUT): Provides TTL logic (0 Vdc or 5 Vdc) in response to the mute button. Set DIP switch 1 for momentary or toggle. When phantom power is applied, logic initializes high (5 Vdc). DIP switch 2 has no effect on SWITCH OUT.

## **Connecting to an Automatic Mixer**

Use these settings if connecting the microphone to an automatic mixer or other device that mutes audio and controls the LED.

- Connect logic leads to the automatic mixer.
  Connect the LED IN to the gate output to illuminate the LED when that channel is gated on.
- Set DIP switch 3 on. This disbles the mute button (the microphone passes audio regardless of whether the button is pressed or not).
- Set DIP switch 1 to configure how the mute button sends SWITCH OUT logic:



Momentary: push = 0 Vdc, release = 5 Vdc




Toggle: initial = 5 Vdc, push = 0 Vdc

# Changing SWITCH OUT to Always Momentary

Use the following modification in situations where your logic interface requires momentary closure of the SWITCH OUT, but you want the mute button to toggle the microphone (DIP switch 1 ON, 3 OFF):

1. Access the circuit board inside the microphone base.

Remove the resistor at R45 and reinstall it at location R46.

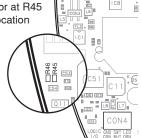

## **Specifications**

#### Type

Condenser (electret bias)

#### Frequency Response

50-17000 Hz

#### Polar Pattern

MX412D/C, MX418D/C: Cardioid MX412D/S, MX418D/S: Supercardioid

#### **Output Impedance**

EIA Rated at 150  $\Omega$  (180  $\Omega$  actual)

#### **Output Configuration**

Active balanced

#### Sensitivity (at 1 kHz, open circuit voltage)

Cardioid: -34 dBV/Pa (21 mV) Supercardioid: -33 dBV/Pa (24 mV)

1 Pascal=94 dB SPL

#### Maximum SPL (1 kHz at 1% THD, 1 kΩ load)

Cardioid: 123 dB Supercardioid: 122 dB

#### **Equivalent Output Noise (A-weighted)**

Cardioid: 29 dB SPL Supercardioid: 28 dB SPL

# Signal-to-Noise Ratio (referenced at 94 dB SPL at 1 kHz)

Cardioid: 65 dB Supercardioid: 66 dB

#### Dynamic Range (1 kΩ load at 1 kHz)

94 dB

#### Common Mode Rejection (10 Hz to 100 kHz)

45 dB minimum

## Preamplifier Output Clipping Level (1% THD)

-6 dBV (0.5 V)

#### Polarity

Positive sound pressure on diaphragm produces positive voltage on pin 2 relative to pin 3 of output XLR connector.

#### **Net Weight**

MX412D: 0.81 kg (1.80 lbs) MX418D: 0.82 kg (1.82 lbs)

#### Packaged Weight

MX412D: 1.63 kg (3.62 lbs) MX412D: 1.64 kg (3.64 lbs)

#### **Logic Connections**

LED IN: Active low ( $\leq$ 1.0V), TTL compatible. Absolute maximum voltage: -0.7V to 50V. LOGIC OUT: Active low ( $\leq$ 1.0V), sinks up to 20mA, TTL compatible. Absolute maximum voltage: -0.7V to 50V (up to 50V through  $3k\Omega$ ).

#### **Mute Switch Attenuation**

-50 dB minimum

#### Cable

3 m (10 ft) attached cable with shielded audio pair terminated at a 3-pin male XLR and three unterminated conductors for logic control

#### **Environmental Conditions**

Operating Temperature: -18–57 °C (0–135 °F) Storage Temperature: -29–74 °C (-20–165 °F) Relative Humidity: 0–95%

#### **Power Requirements**

11-52 Vdc phantom, 2.0 mA

#### **Furnished Accessories**

Snap-fit Foam Windscreen (1 fur-	RK412WS
nished, 4 in replacement kit)	

#### **Optional Accessories**

Foam Ball Windscreen	A99WS
Metal Locking Windscreen	A412MWS
Custom Logic Cable (specify length)	95B2509

#### **Replacement Parts**

Omnidirectional Cartridge (Black)	R183B
Supercardioid Cartridge (Black)	R184B
Cardioid Cartridge (Black)	R185B

#### CERTIFICATION

Eligible to bear CE Marking. Conforms to European EMC Directive 2004/108/EC. Meets Harmonized Standards EN55103-1:1996 and EN55103-2:1996, for residential (E1) and light industrial (E2) environments.

The Declaration of Conformity can be obtained from:

Authorized European representative:


Shure Europe GmbH


Headquarters Europe, Middle East & Africa


Department: EMEA Approval

Wannenacker Str. 28

D-74078 Heilbronn, Germany Phone: +49 7131 72 14 0 Fax: +49 7131 72 14 14 Email: EMEAsupport@shure.de

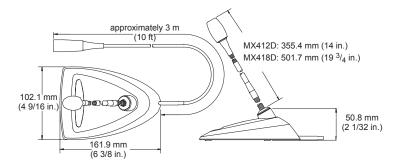

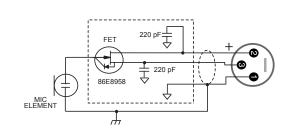

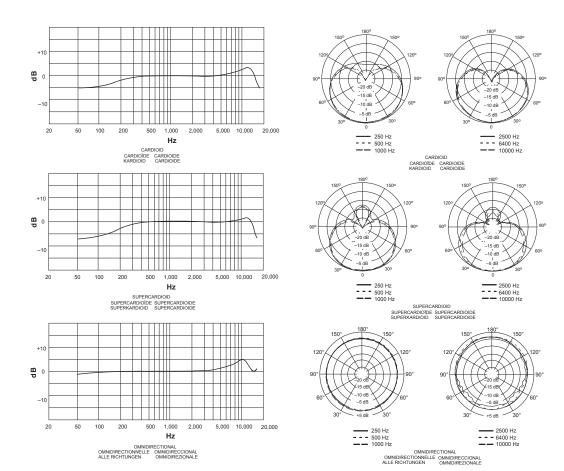

# SHURE

SHURE Incorporated http://www.shure.com United States, Canada, Latin America, Caribbean: 5800 W. Touhy Avenue, Niles, IL 60714-4608, U.S.A. Phone: 847-600-2000 U.S. Fax: 847-600-1212 Intl Fax: 847-600-6446

Europe, Middle East, Africa: Shure Europe GmbH, Phone: 49-7131-72140 Fax: 49-7131-721414

Asia, Pacific:

Shure Asia Limited, Phone: 852-2893-4290

Fax: 852-2893-4055

SHURE Incorporated http://www.shure.com États-Unis, Canada, Amérique latine, Caraïbes: 5800 W. Touhy Avenue, Niles, IL 60714-4608, U.S.A.

Téléphone: 847-600-2000

Télécopie aux États-Unis: 847-600-1212 Télécopie internationale: 847-600-6446

Europe, Moyen-Orient, Afrique:

Shure Europe GmbH, Téléphone: 49-7131-72140

Télécopie: 49-7131-721414

Asie, Pacifique:

Shure Asia Limited, Téléphone: 852-2893-4290

Télécopie: 852-2893-4055

SHURE Incorporated http://www.shure.com Estados Unidos, Canadá, Latinoamérica, Caribe: 5800 W. Touhy Avenue, Niles, IL 60714-4608, EE.UU. Teléfono: 847-600-2000 (dentro de los EE.UU.) Fax: 847-600-1212 Fax internacional: 847-600-6446

Europa, Medio Oriente, Africa: Shure Europe GmbH, teléfono: 49-7131-72140

Fax: 49-7131-721414

Asia, Pacífico:

Shure Asia Limited, teléfono: 852-2893-4290

Fax: 852-2893-4055

SHURE Incorporated http://www.shure.com Stati Uniti, Canada, America latina, Caraibi: 5800 W. Touhy Avenue, Niles, IL 60714-4608, U.S.A. Numero telefonico: 847-600-2000 Fax U.S.A.: 847-600-1212

Fax internazionale: 847-600-6446

Europa, Medio Oriente, Africa:

Shure Europe GmbH, numero telefonico: 49-7131-72140

Fax: 49-7131-721414

Asia, Pacifico:

Shure Asia Limited, numero telefonico: 852-2893-4290

Fax: 852-2893-4055